



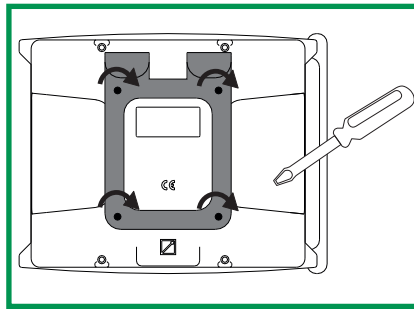

# REMOTE<sup>2</sup>


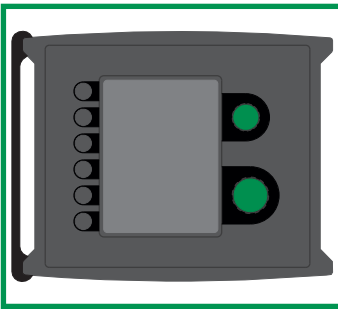


Se quickguide.  
For more information:  
[www.migatronic.com](http://www.migatronic.com)

Please read your quickguide.  
For more information:  
[www.migatronic.com](http://www.migatronic.com)


Bitte Ihre Kurzanleitung lesen.  
Für weitere Auskünfte, besuchen Sie:  
[www.migatronic.com](http://www.migatronic.com)

## Tilslutning / Connection / Anschluss

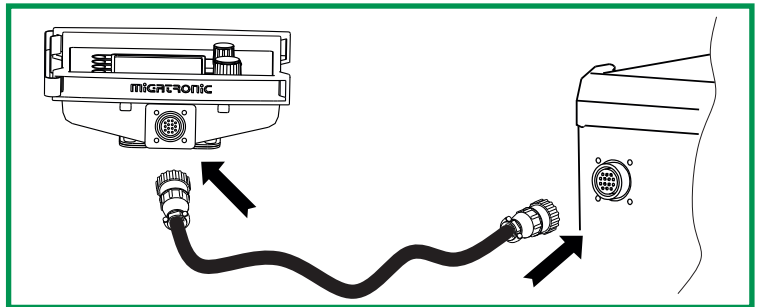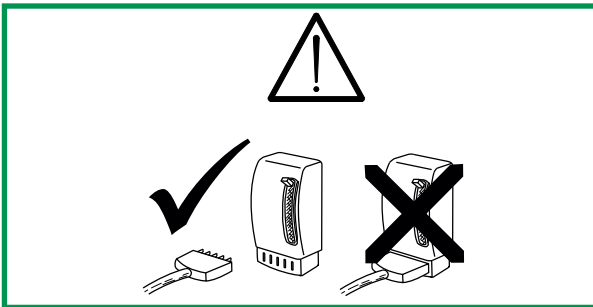


**E02-17** Remote<sup>2</sup> indeholder forkert software og skal konfigureres igen til brug med *Sigma Next RC*. Upload software og konfigurér.  
The Remote<sup>2</sup> contains wrong software and must be reconfigured for use with *Sigma Next RC*. Please upload software and configure.  
Remote<sup>2</sup> enthält fehlerhafte Software und muss neu konfiguriert werden für den Einsatz mit *Sigma Next RC*. Software hochladen und konfigurieren.

**E25-07** Remote<sup>2</sup> indeholder forkert software og skal konfigureres igen til brug med *Sigma Galaxy*. Upload software og konfigurér.  
The Remote<sup>2</sup> contains wrong software and must be reconfigured for use with *Sigma Next RC*. Please upload software and configure.  
Remote<sup>2</sup> enthält fehlerhafte Software und muss neu konfiguriert werden für den Einsatz mit *Sigma Next RC*. Software hochladen und konfigurieren.

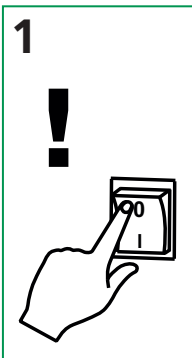


**2**

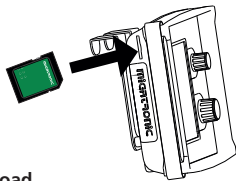


Software upload  
Software can be downloaded from [www.migatronic.com](http://www.migatronic.com)

Software upload  
The software can be downloaded from [www.migatronic.com](http://www.migatronic.com)

Software upload  
Software kann auf [www.migatronic.com](http://www.migatronic.com) eingelesen werden

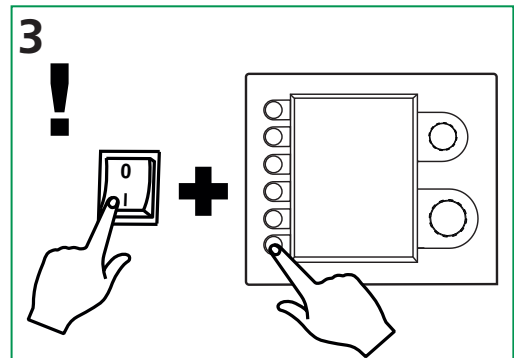

**4**

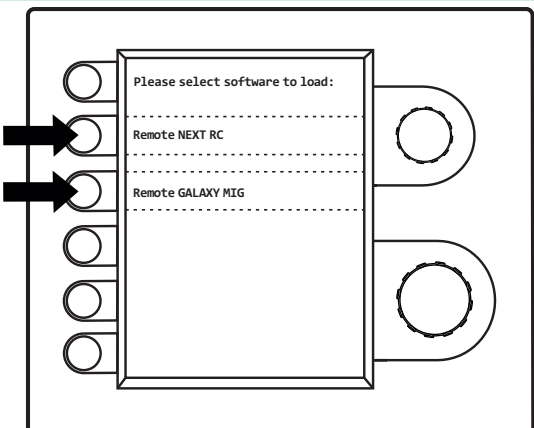


Please select software to load:

Remote NEXT RC

Remote GALAXY MIG

**5**

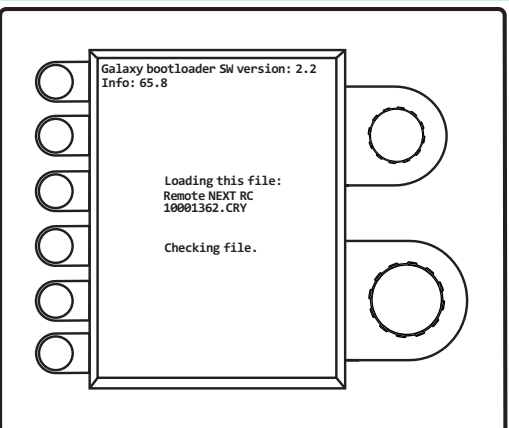

Galaxy bootloader SW version: 2.2  
Info: 65.8


Loading this file:  
Remote NEXT RC  
10001362.CRV

Checking file.



# REMOTE<sup>2</sup>

## Reservedelsliste / Spare parts list / Ersatzteilliste / Liste des pièces de rechange

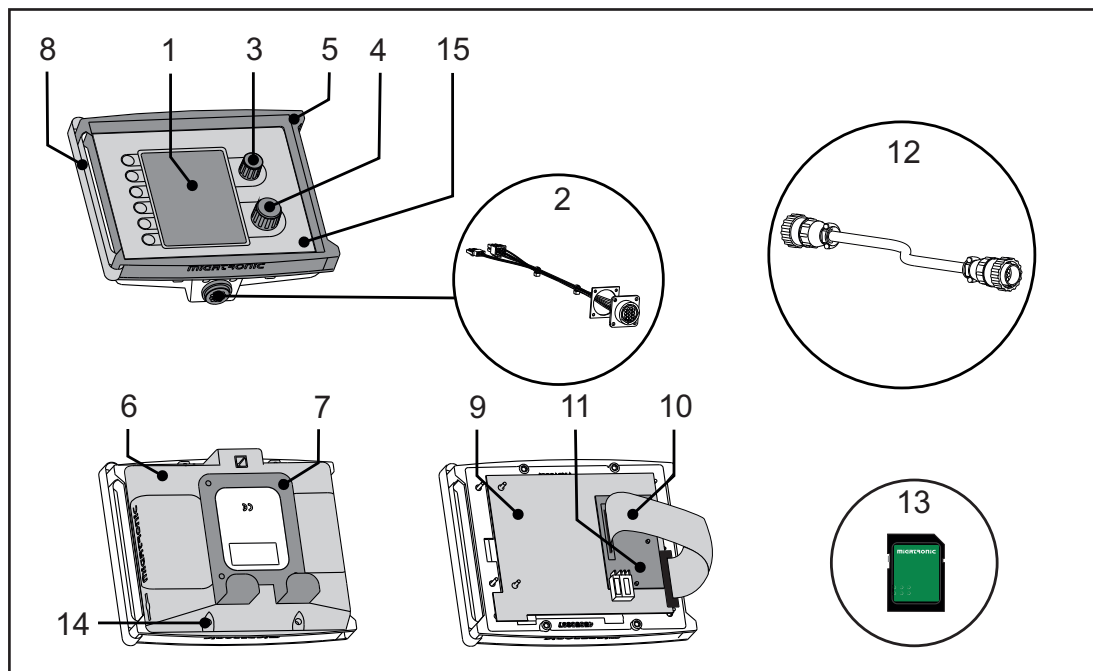

| Pos. | No.      | Varebetegnelse<br>Warenbezeichnung   | Description of goods<br>Désignation des pièces      |
|------|----------|--------------------------------------|---|
| 1.1  | 24550118 | Display                              | Display   |
| 1.2  | 12243013 | Display                              | Display   |
|      |          | Grafisk display                      | Graphical display                                   |
|      |          | Grafisch Display                     | Affichage graphique                                 |
| 2    | 74471421 | Knop ø22                             | Button ø22  |
|      |          | Knopf ø22                            | Bouton ø22  |
| 3.1  | 18509026 | Dæksel for knap ø22                  | Cover for button ø22                                |
|      |          | Deckel für den Knopf ø22             | Couvercle de bouton ø22                             |
| 3.2  | 18521212 | Knop ø28                             | Button ø28  |
|      |          | Knopf ø28                            | Bouton ø28  |
| 4.1  | 18503605 | Dæksel for knap ø28                  | Cover for button ø28                                |
|      |          | Deckel für den Knopf ø28             | Couvercle de bouton ø28                             |
| 4.2  | 18521210 | Plastikfront                         | Plastic front                                       |
| 5    | 45050397 | Plastikfront                         | Façade plastique                                    |
| 6    | 45050398 | Plastikbag                           | Plastic back  |
| 7    | 24611973 | Plastikrückwand                      | Façade postérieure plastique                        |
|      |          | Beslag for fjernbetjening            | Fittings for remote control                         |
|      |          | Beschlag für Fernregler              | Garniture   |
| 8    | 70220011 | Rem                                  | Strap   |
|      |          | Riemen                               |   |
| 9    | 71613638 | Print                                | PCB   |
|      |          | Platine                              | Circuit imprimé                                     |
| 10   | 17200183 | Fladkabel 34pol, 300mm               | Flat cable 34-pole, 300mm                           |
|      |          | Flachkabel 34 polig, 300mm           | Câble méplat, 34-pôles, 300mm                       |
| 11   | 71613637 | Print, remote PSU                    | PCB, remote PSU                                     |
|      |          | Platine, remote PSU                  | Circuit imprimé, remote PSU                         |
| 12   | 74340015 | Motorstyrings-/fjernreguleringskabel | Motor control cable/remote control cable            |
|      |          | Motorstyrings-/Fernreglerkabel       | Câble contrôle de moteur/ câble commande à distance |
| 13   | 12646000 | SD kort                              | SD card   |
|      |          | SD Karte                             | Carte SD  |
| 14   | 40840514 | Skruer M5x14                         | Screw M5x14   |
|      |          | Schraube M5x14                       | Vis M5x14   |
| 15a  | 45050435 | Front                                | Front   |
|      |          | Front                                | Plaque avant  |
| 15b  | 61113584 | Foliefront                           | Foil front  |
|      |          | Folienfront                          | Face avant de feuille                               |